English

A. Hardware connection:

1. Guide to components

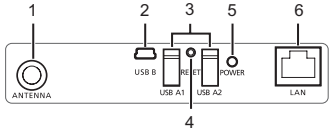

1	WLAN antenna connector		
2	Mini USB	5	Power indicator
3	USB Type A	6	LAN port
4	Reset button		

2. Turn on the projector

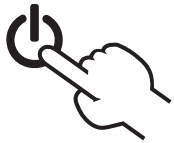

3. Check the information on the splash screen

Projector ID: 7362

Projector Name (SSID)	:	**AcerProjector 001**
Server IP	:	**192.168.100.10**
WEP Key	:	**None**

Check **Projector ID**, **Projector Name (SSID)**, **Server IP** and **WEP** on the splash screen. The **Server IP** will be assigned by the network with DHCP enabled. Ask your supervisor for the wireless connection WEP key when WEP is enabled.

4. Connect to network

a Switch on your system, and activate your wireless LAN.

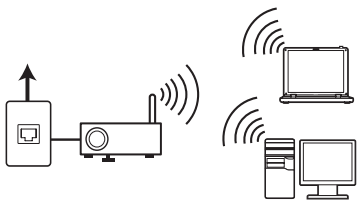

b Scan for avaliable WLAN APs using your preferred WLAN manager.

c Select and connect to the access point labeled **AcerProjector**, or **AcerProjectorXXXX**.

Choose a wireless network
Click an item in the list below to connect to a wireless network in range or to get more information.
Acer Projector
Manual
Unsecured wireless network
This network is configured for open access. Information sent over this network may be visible to others. If you want to connect to this network, click Connect.
MIS-15FD2
Unsecured wireless network

d Connect the projector to your LAN for a wired connection.

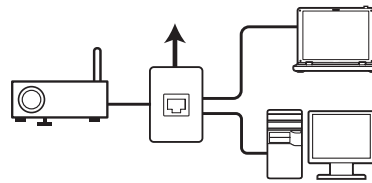

B. Software installation:

1. The software is stored on the Acer Projector Gateway. Please follow the steps below to download and install:

a Open the internet browser.

b You will automatically be taken to the welcome page.

c Enter the Server IP address into your browser's address bar if you do not see the welcome page.



d Click on **Download Acer eProjection Management** on the welcome page.

e Click on **Run** to download and install the software.

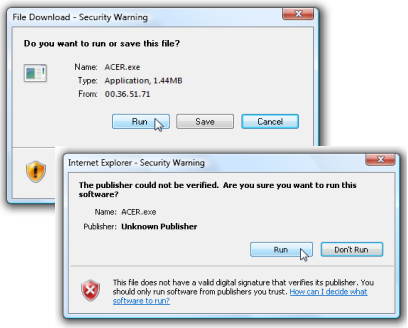
File Download - Security Warning
Do you want to run or save this file?
Name: ACER.exe
Type: Application, 1.44MB
From: 00.36.51.71
Run
Save
Cancel
Internet Explorer - Security Warning
The publisher could not be verified. Are you sure you want to run this software?
Name: ACER.exe
Publisher: Unknown Publisher
Run
Don't Run
This file does not have a valid digital signature that verifies its publisher. You should only run software from publishers you trust. How can I decide what software to run?

f Click on **Next** to launch the **Welcome to the Acer Projector Gateway Setup Wizard**.

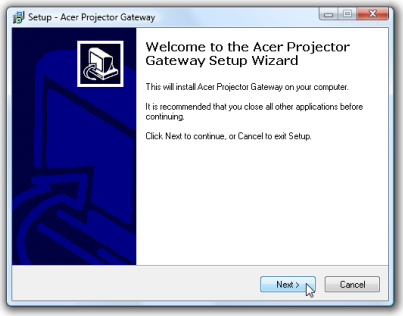
Setup - Acer Projector Gateway
Welcome to the Acer Projector Gateway Setup Wizard
This will install Acer Projector Gateway on your computer.
It is recommended that you close all other applications before continuing.
Click Next to continue, or Cancel to exit Setup.
Next >
Cancel

Note: Make sure your personal firewall doesn't block the Acer eProjection Management application.

2. **You can also insert the optional Acer Plug-and-Show (PnS) token featuring the windows autorun function into the USB port on your system.**

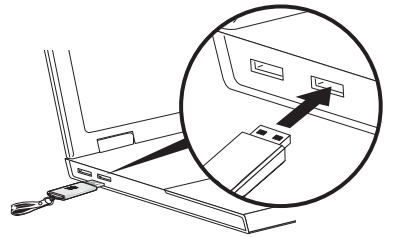

Note: Acer PnS token is the optional accessory.

C. Launch the software

Once the installation is complete or Acer PnS token is inserted into the USB port on your system, Acer eProjection Management will open.

Enter the **Projector ID** (if needed) and **Username** to log in to your Acer Projector.

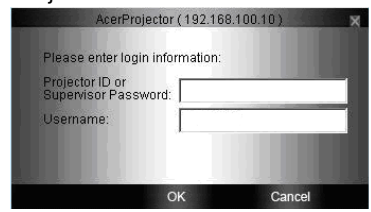

Once your're connected, the PC screen will be projected.

Note: For more information, please refer to the online manual. All the illustrations in this quick guide are for reference only.